


Coffee Table Installation

INSTALLATION MANUAL Tools You Will Need:

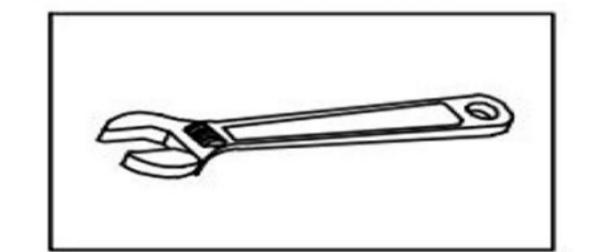

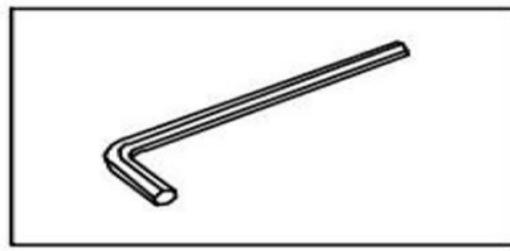

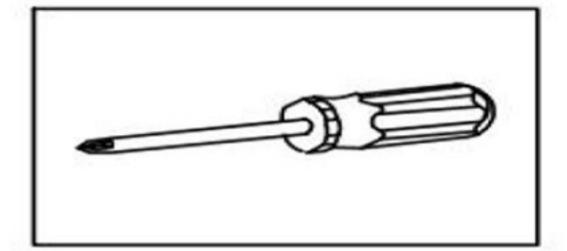

Adjustabie Wrench

Hexagon wrench


Philips Screwdriver

Before the Installation

- 1. Do not throw away packing materials until assembly is complete for small parts may come loose inside the carton during shipment. If parts are missing, please contact us.
- 2. Assemble this item on a soft surface, such as carpet to protect the finish.
- 3. Proper assembly of this item requires 2 people.
- 4. Periodically check to ensure that all connections are tight.
- 7. It is recommended that installation of the product be done by a qualified licensed plumber.


Care and Cleaning


- 1. To protect the finish, avoid use chemicals and household cleaners.
- 2. All hot serving dishes should be placed on a pad.
- 3. Any liquid spilled onto the top should be cleaned up immediately with a damp cloth.

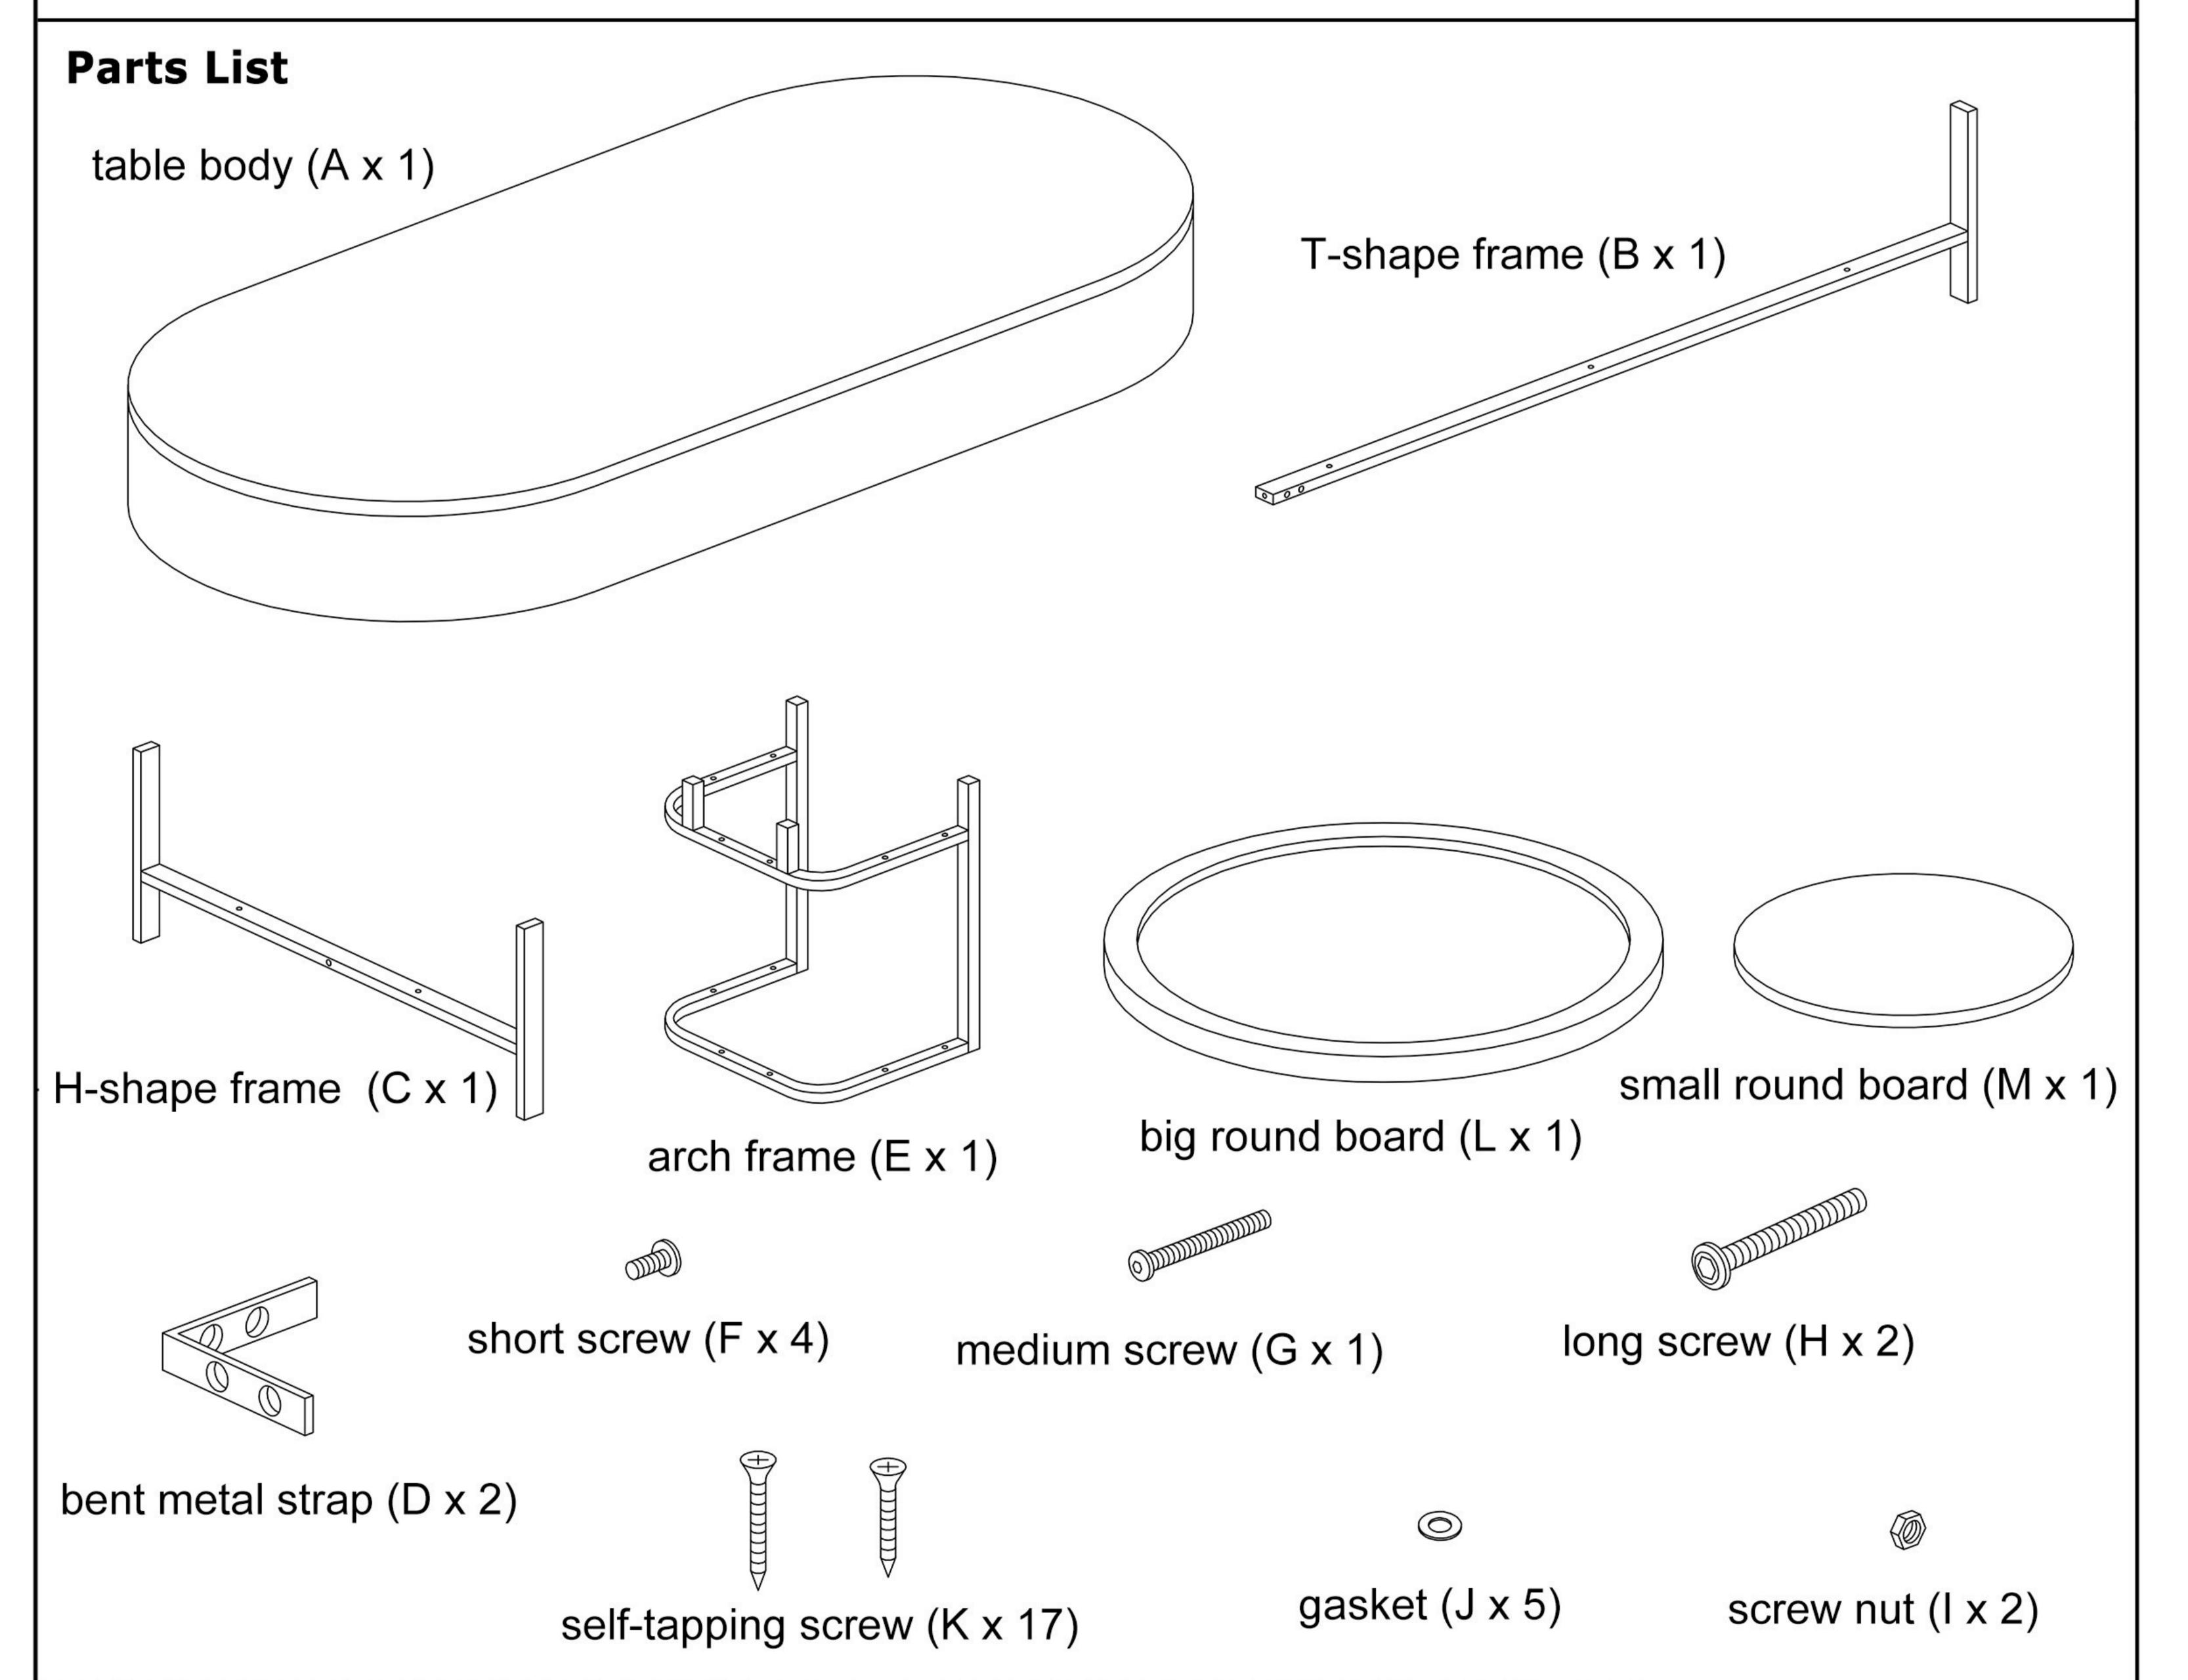

Note: Do not fully tighten all bolts until all parts are in place. Failure to follow these instructions may cause the bolt to misalign during assembly.


Installation Guide

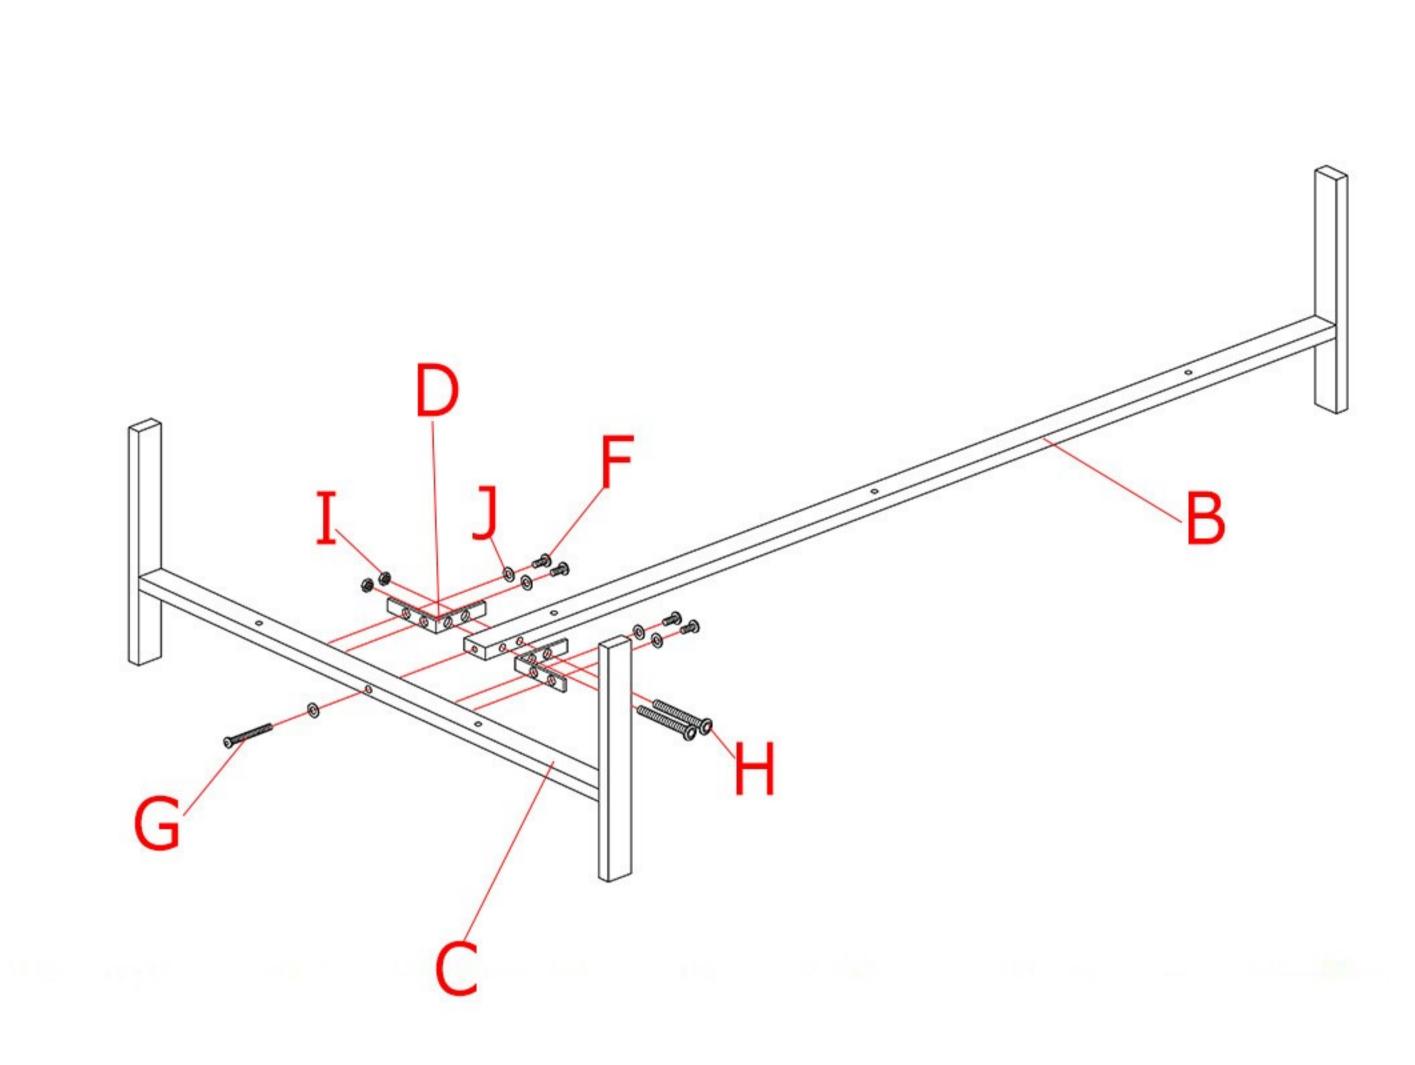

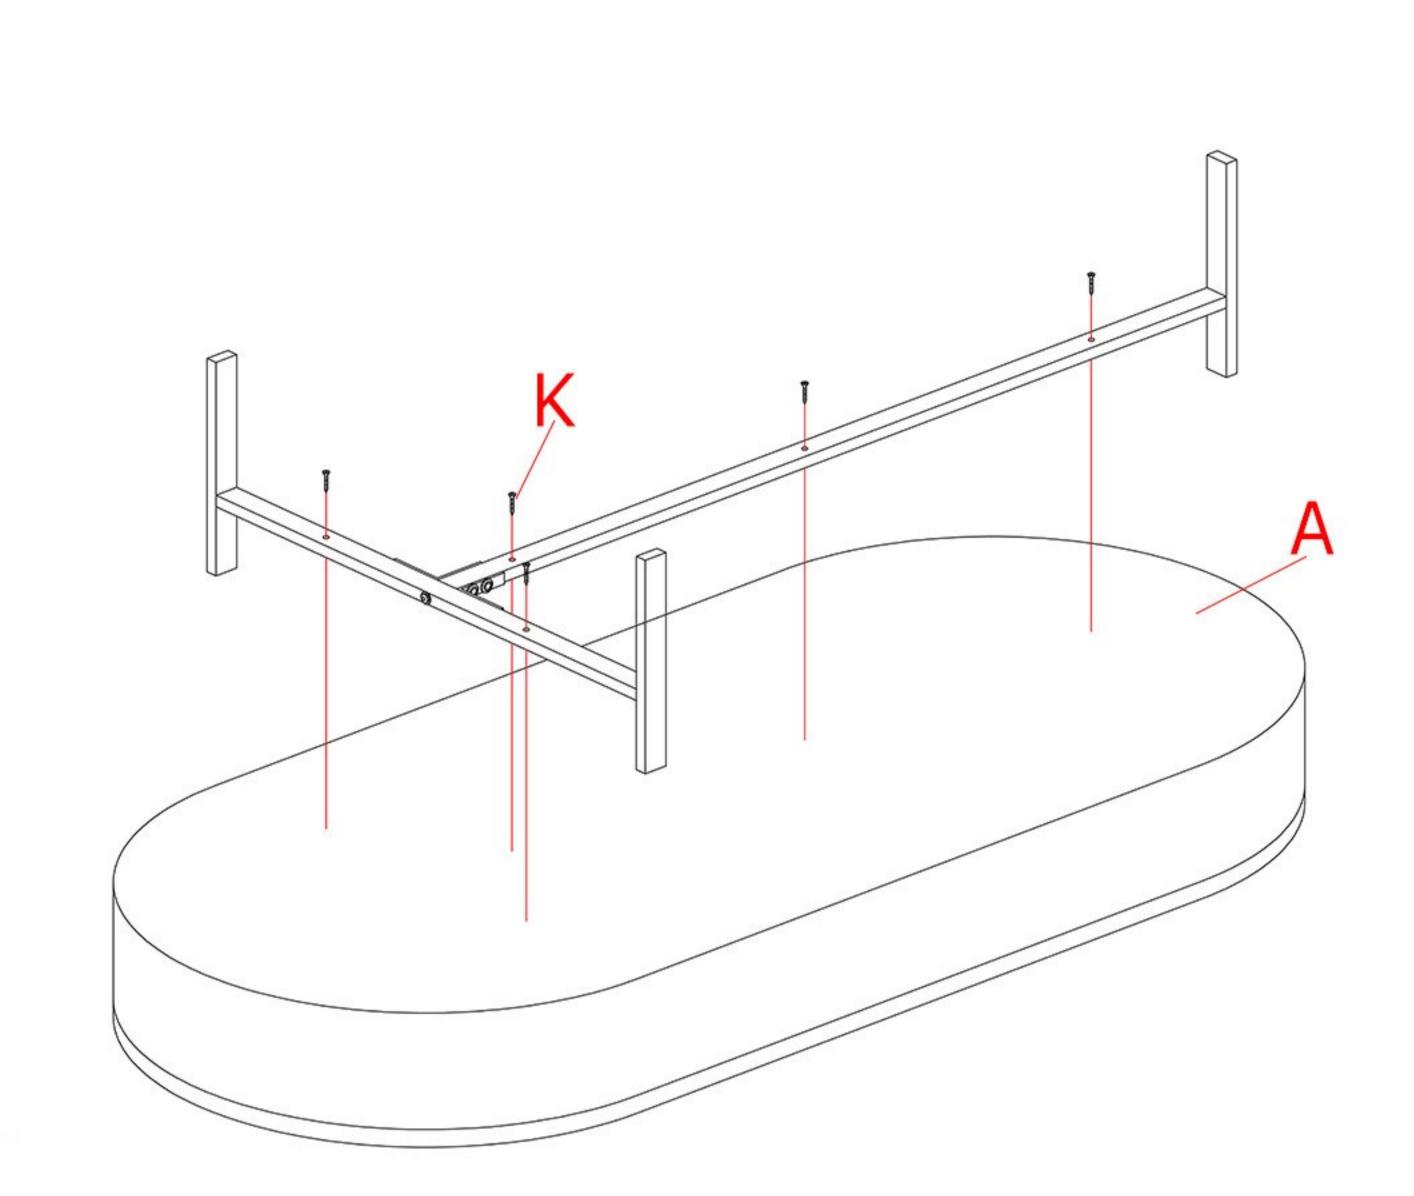


1. Align one end of T-shape frame (B) to H-shape frame (C) at the central hole and fix them by screwing on a medium screw (G) and gasket (J) through the hole of H-shape frame into the T-shape frame. Align bent metal straps (D) with the T-shape frame and H-shape frame hole by hole and fix them with short screws (F) and gaskets vertically through the holes of bent metal straps to H-shape and long screws (H) and screw nuts (I) vertically through the holes of bent metal straps to the T-shape.

2. Place the finished metal frame to the bottom of the table body (A) and make sure that the frame is perfectly inserted onto the table body. According to the holes on the frame, fix the frame to the table body with short self- tapping screws (K).

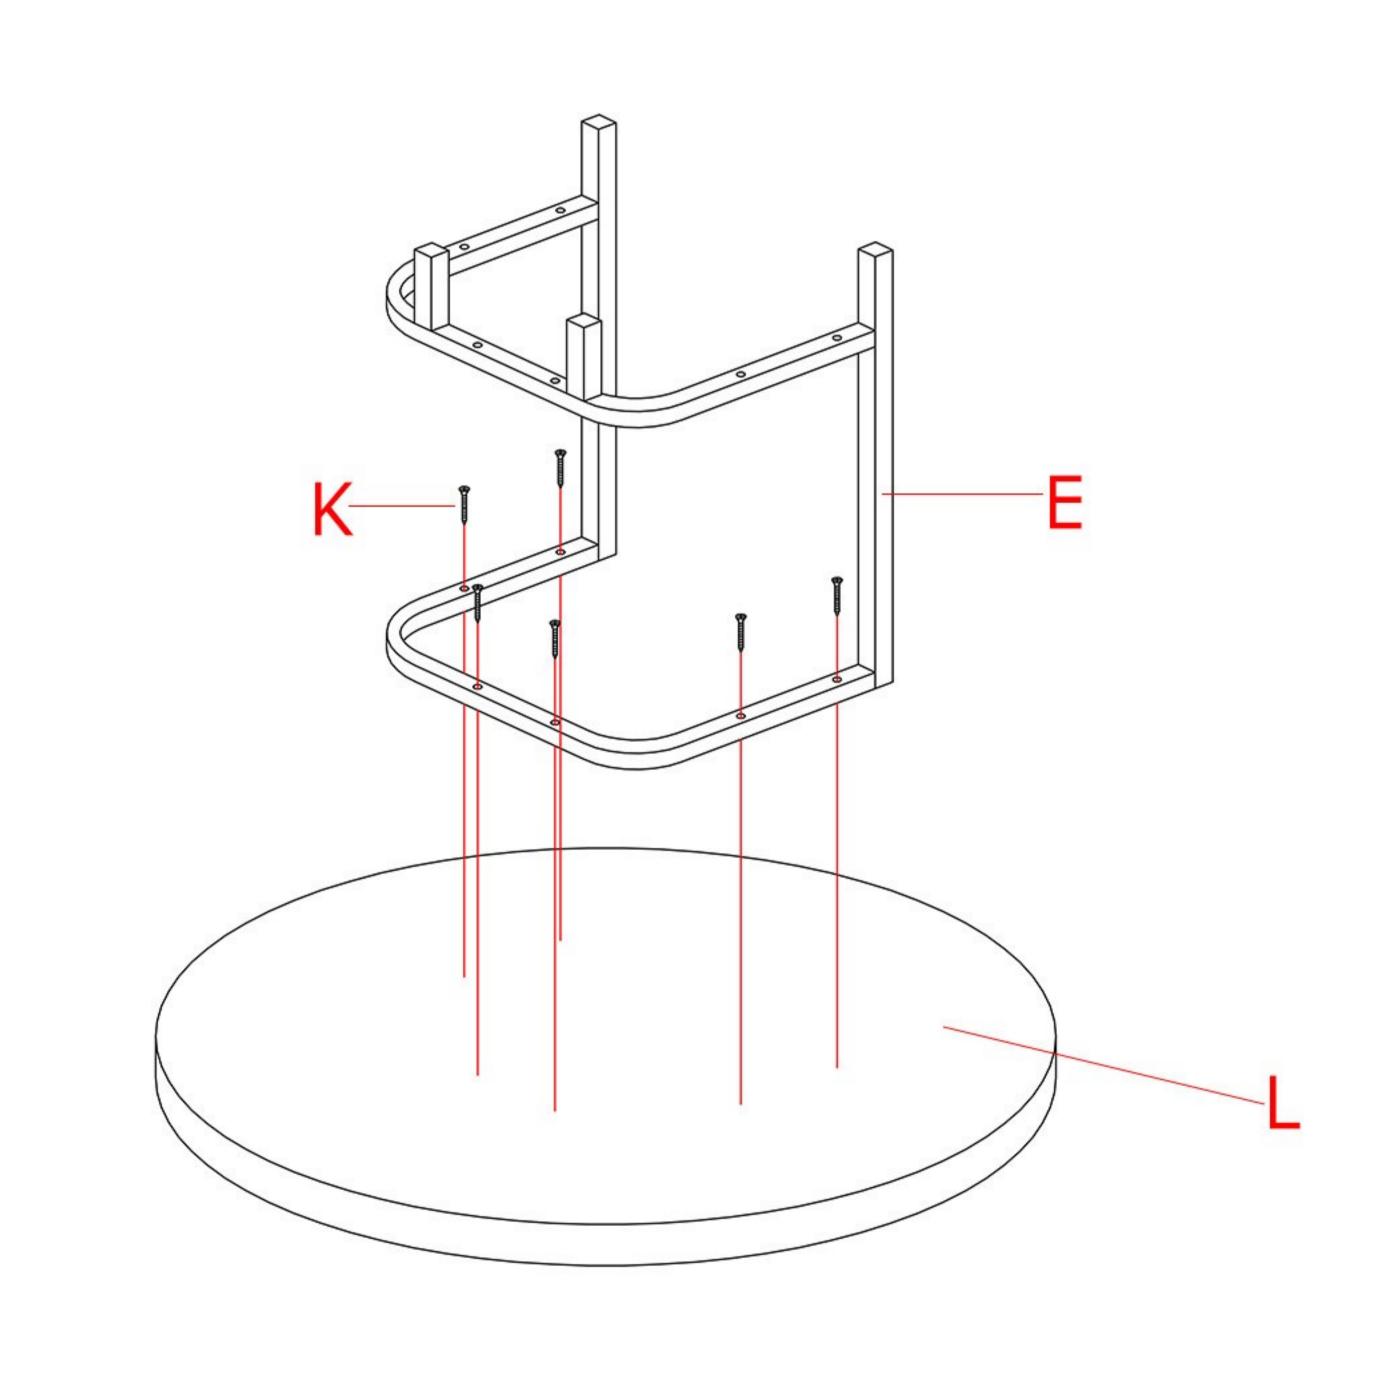

3. Place the big round board (L) upside down on the floor and the arch frame (E) on the the big round board. Center the board and fix the board to the frame by driving the long self-tapping screws (K) through the holes on the frame into the board.

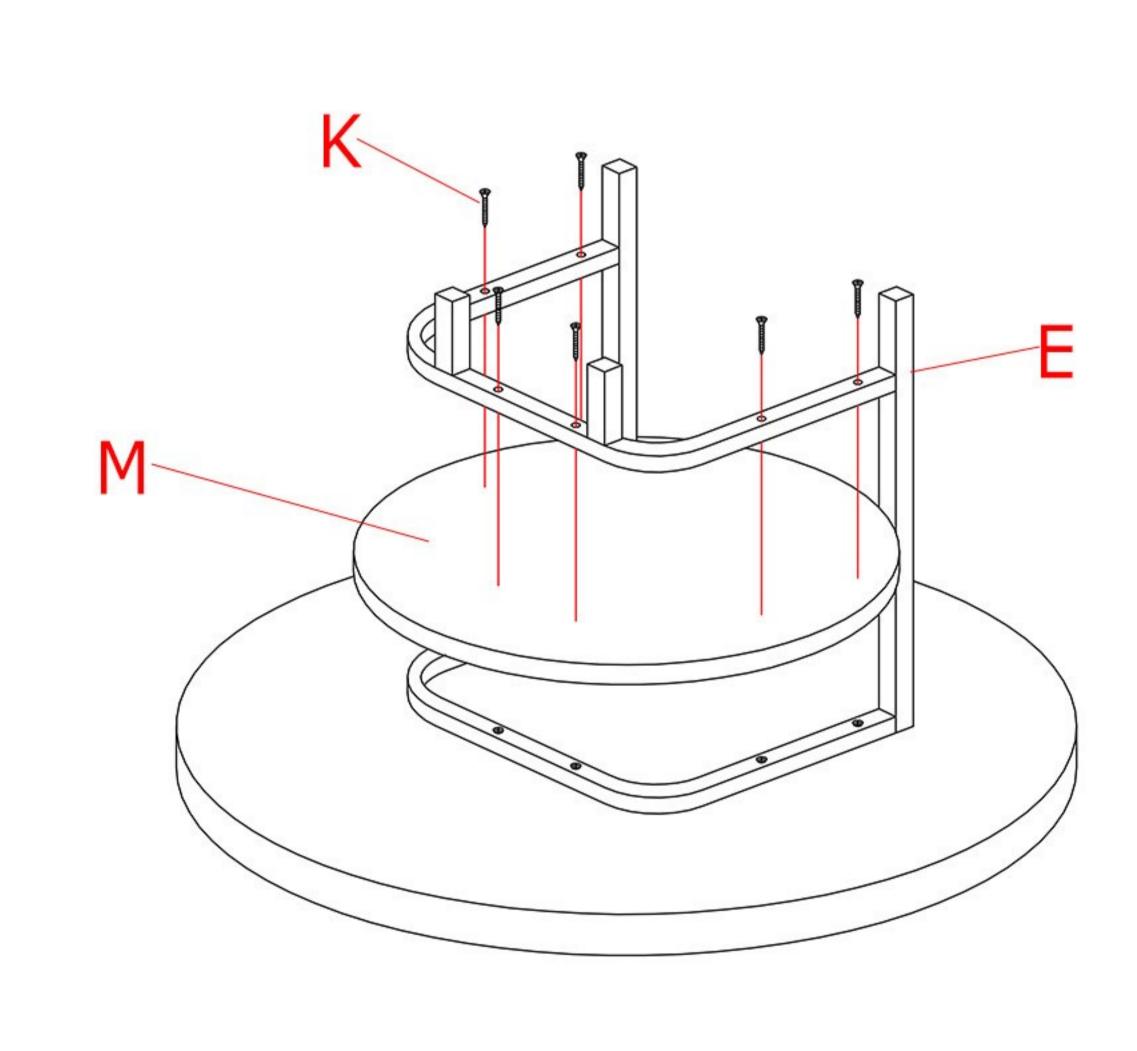

4. Center the back of the small round board (M) to the arch frame (E) and fix it with long self-tapping screws (K) as shown.